

# 17548

17549, 17550, 17551, 17612, 17613

## STONE COATED STEEL ROOF HOOK FOR SIDE MOUNT RAILS; ADJUSTABLE



A DIVISION OF QUICKSCREWS INTERNATIONAL CORP

# INSTALL INSTRUCTIONS



1



2



3



4



5



6

## RECOMMENDED MATERIALS

- Rafter locator
- Chalk or crayon
- 3/16" Drill Bit
- Sealant

## INSTALLATION INSTRUCTIONS


1. Remove the Stone Coated Steel Sheets from the area in which you will be installing.
2. Locate and mark the rafters.
3. Place the Hook and predrill two holes with the 3/16" Drill Bit.
4. Remove the Hook, clear the debris, and fill the predrilled holes with sealant.
5. Place and mount the Hook using the Solar Screws.
6. Place the Stone Coated Steel Sheets back over the installation area.

## ADJUSTABLE HOOKS

- Adjust the Hook as need be either before or after mounting the Hook.

## TORQUE REQUIREMENTS

M8 Bolt requires 15 minimum torque ft-lb

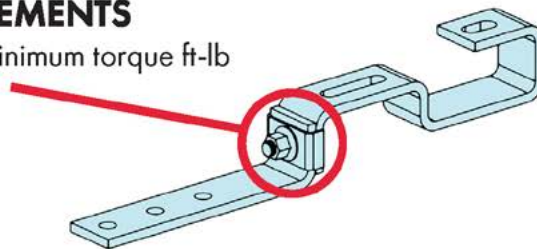

## IF USING GALVA FLASHING

1. Make a cut in the paper
2. Apply sealant to the underside of the Galva Flashing
3. Slide the Flashing underneath the paper or nail down edges
4. Cover the edges of the Galva Flashing with sealant



PN 17614