

17598

17597, 17599

ALL TILE ROOF HOOK

FOR SIDE MOUNT RAILS; ADJUSTABLE; WORKS WITH DOUBLE HEIGHT BATTENS



A DIVISION OF QUICKSCREWS INTERNATIONAL CORP

INSTALL INSTRUCTIONS



1

RECOMMENDED MATERIALS

- Rafter locator
- Chalk or crayon
- Drill Bit
- Sealant compatible with roofing materials



2

INSTALLATION INSTRUCTIONS

1. Remove the tiles from the install area
2. Locate and mark the rafters
3. Place the mount and predrill holes
4. Fill the predrilled holes with sealant
5. Drive the Mounting Screws
6. Place the tiles back over the roof mount



3

ADJUSTABLE HOOKS


- Adjust the mount as need be either before or after installation
- The ideal location for the mount on Curved Tiles is over the valley of the tile to minimize drainage



4

TORQUE REQUIREMENTS

M10 Bolt requires 20 minimum torque ft-lb

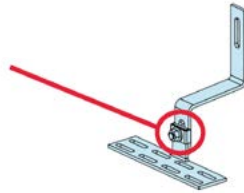

5

IF USING GALVA FLASHING

1. Make a cut in the paper
2. Apply sealant to the underside of the Galva Flashing
3. Slide the Flashing underneath the paper or nail down edges
4. Cover the edges of the Galva Flashing with sealant



6



PN 15890



1



2



3



4



5



6



www.quickbolt.com