

17566

17567, 17640, 17641

ALL STONE COATED STEEL ROOF HOOK FOR SIDE MOUNT RAILS; WIDE BASE; ADJUSTABLE



A DIVISION OF QUICKSCREWS INTERNATIONAL CORP

INSTALL INSTRUCTIONS



RECOMMENDED MATERIALS

- Rafter locator
- Chalk or crayon
- Drill Bit
- Sealant compatible with roofing materials



INSTALLATION INSTRUCTIONS

1. Remove the tiles from the install area
2. Locate and mark the rafters
3. Place the mount and predrill holes
4. Fill the predrilled holes with sealant
5. Drive the Mounting Screws
6. Place the tiles back over the roof mount




ADJUSTABLE HOOKS

- Adjust the mount as need be either before or after installation
- The ideal location for the mount on Curved Tiles is over the valley of the tile to minimize drainage



TORQUE REQUIREMENTS

M8 Bolt requires 15 minimum torque ft-lb

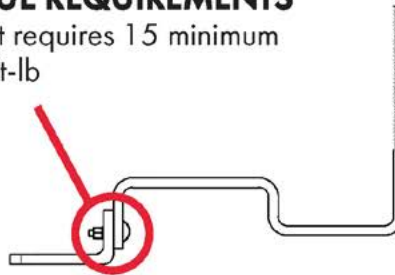

PN 17566

