

# 17652


17654, 17750, 17751, 17752, 17753

## STONE COATED STEEL DIRECT TO DECK HOOK FOR SIDE MOUNT RAILS



A DIVISION OF QUICKSCREWS INTERNATIONAL CORP

# INSTALL INSTRUCTIONS

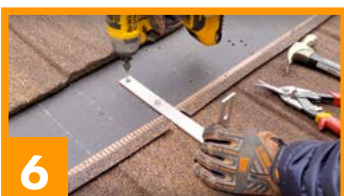

## RECOMMENDED MATERIALS

- Rafter locator
- Chalk or crayon
- 3/16" Drill Bit
- Aviation or Tin Snips
- Sealant

## INSTALLATION INSTRUCTIONS

1. Locate and mark the rafters
2. Snip panel's Bottom Clip Lock return enough for hook to sit flush
3. Snip or bend off the cut piece of metal
4. Place the Hook and predrill two holes with the 3/16" Drill Bit
5. Remove the Hook, clear the debris, and fill the predrilled holes with sealant
6. Place and mount the Hook using the Solar Screws
7. Place the Stone Coated Steel Panel back over the installation area and lock into place by sliding the nose of the panel onto the clip joint

## IF USING GALVA FLASHING

1. Make a cut in the paper
2. Apply sealant to the underside of the Galva Flashing
3. Slide the Flashing underneath the paper or nail down edges
4. Cover the edges of the Galva Flashing with sealant

